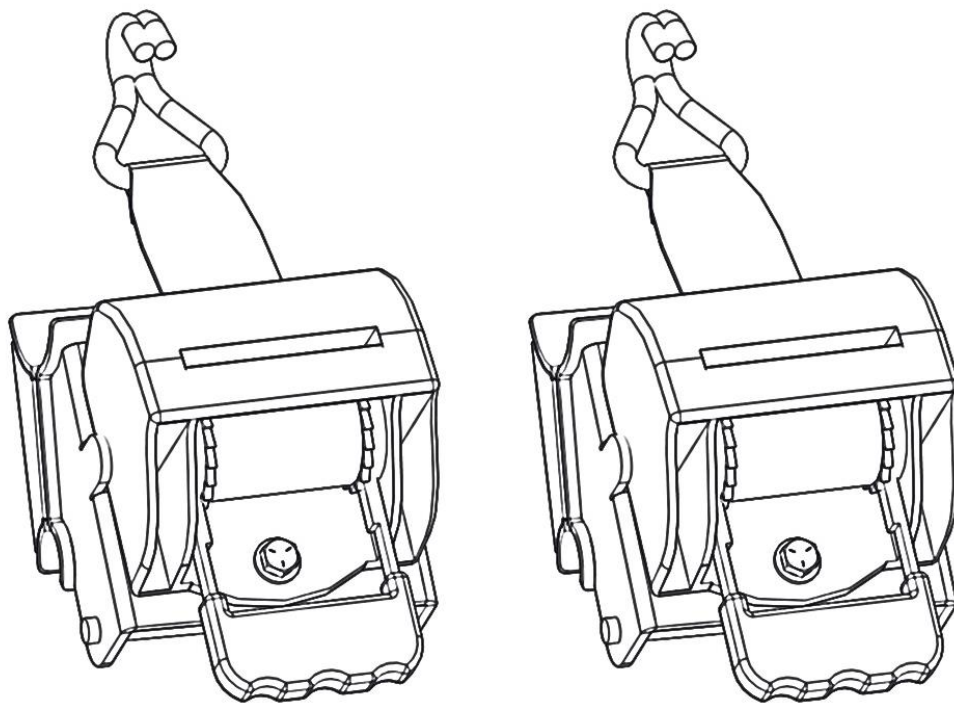


# Holman

---

## Instruction Guide 31495

---



---

Holman  
Rancho Cordova, CA 95742  
800-343-7486

[InstallationSupport@Holman.com](mailto:InstallationSupport@Holman.com)

**PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.**

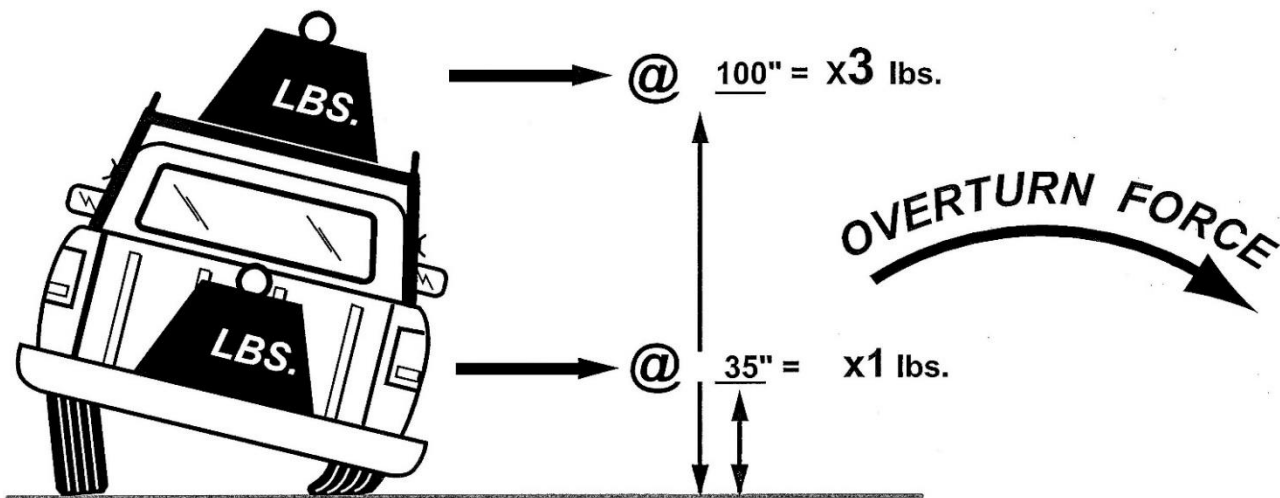
**Warning**



**DO NOT EXCEED MANUFACTURERS WEIGHT CAPACITY FOR ROOF.**

When loading with a forklift, secure the hook on the bracket bar to keep hook from interfering when loading.

**DON'T OVERLOAD YOUR VEHICLE!**



WEIGHT CARRIED ABOVE THE FLOOR OF THE TRUCK BED (E.G., ON AN OVERHEAD TRUCK RACK) WILL SIGNIFICANTLY INCREASE THE VEHICLE'S TENDENCY TO OVERTURN. ALWAYS KEEP HEAVY LOADS EVENLY DISTRIBUTED AND AS LOW AS POSSIBLE. IT IS IMPORTANT TO NOTE THAT THE HOLMAN RACK LOAD BEARING CAPACITY MAY BE GREATER THAN YOUR TRUCK'S GAWR OR GVWR CAPACITY AND IS PROBABLY GREATER THAN THE WEIGHT THAT CAN BE SAFELY CARRIED OVERHEAD. ALWAYS RETIGHTEN ALL BOLTS AFTER FIRST USE. REGULARLY CHECK BOLTS FOR TIGHTNESS.

*For TECHNICAL SUPPORT Call:*

**1.800.343.7486**

**Monday-Friday, 7AM - 4 PM (PST)**

**www.Holman.com**

## Table of Contents

Tools Needed .....	2
Before You Begin .....	2
Parts List.....	2
Hardware .....	3
Step 1 – Assemble Ratchet Strap Brackets.....	3
Step 2 – Attach Ratchet Straps .....	4
Loading Precautions.....	4

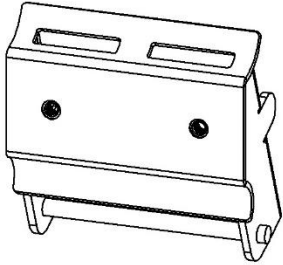
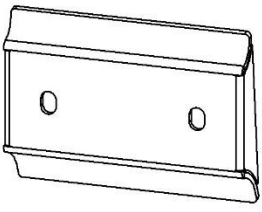
## Tools Needed

1/2" Socket and Wrench	1/2" Box Wrench
------------------------	-----------------







## Before You Begin

- **THIS PRODUCT FITS ONLY THE LOADING AREA OF FORKLIFT LOADABLE RACKS.**
- Read all instructions prior to assembling or installing any Holman product.

## Parts List


NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.
1		102064	RATCHET STRAP BRACKET ASSEMBLY	2
2		102061	BACK SIDE CLAMP	2
3		F18812	LARGE RATCHET STRAP	2
4		18-31495	HARDWARE KIT	1

## Hardware

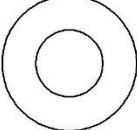ITEM	HARDWARE TO SCALE	PART NUMBER	DESCRIPTION	QTY.
1		11241178	5/16-18 X 3/4" HEX HEAD BOLT	4
2		11241179	5/16-18 X 1" HEX HEAD BOLT	2
3	 	37521	5/16"-18 LOCK NUT	2
4		1133620	5/16" LOCKING WASHER	4
5		33006	5/16" FLAT WASHER	8



## Step 1 – Assemble Ratchet Strap Brackets

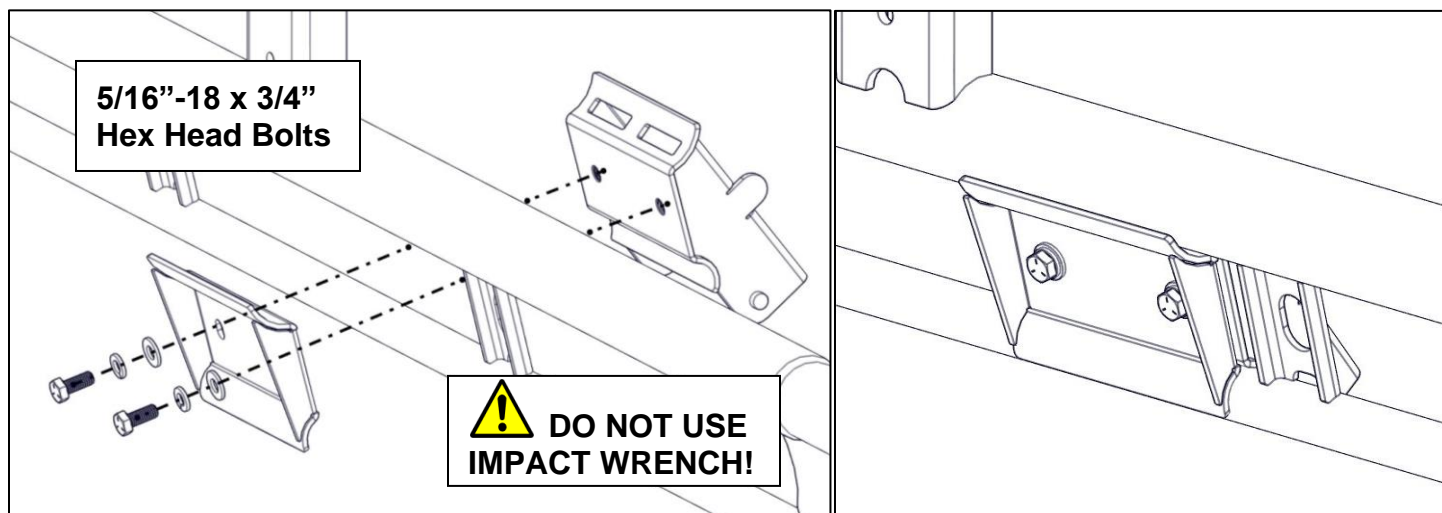- Using 5/16"-18 x 3/4" hex head bolts, 5/16" lock washers, and 5/16" flat washers, attach bracket assembly to backside clamp.
- Tighten. **DO NOT USE IMPACT WRENCH.**




## **Step 2 – Attach Ratchet Straps**

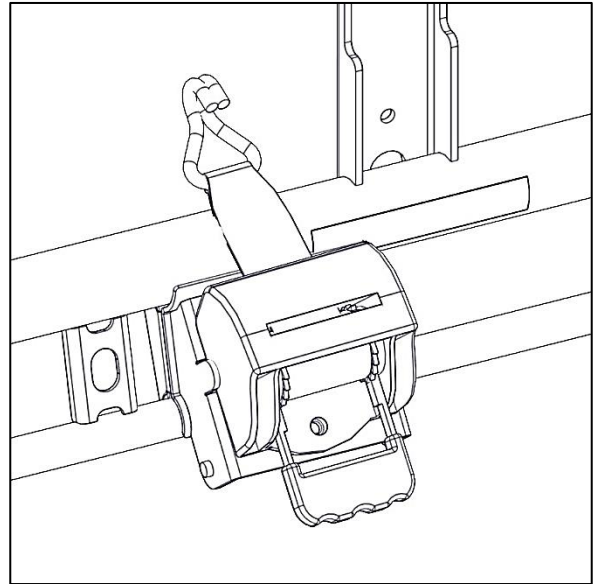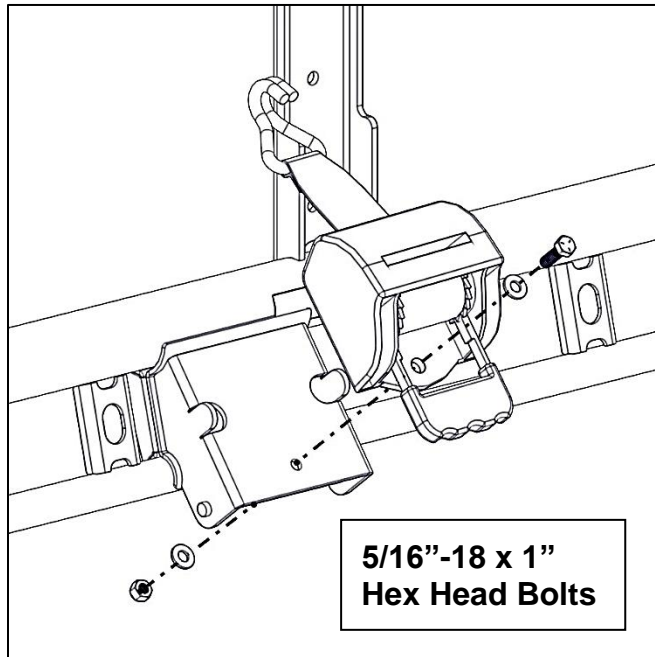- Using 5/16"-18 x 1" hex head bolts, 5/16" flat washers, and 5/16" lock nuts, bolt ratchet strap to bracket.
- Tighten.



## **Loading Precautions**

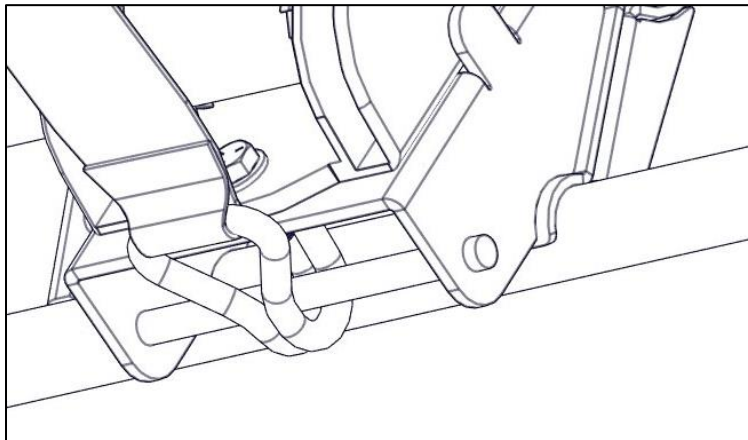- When loading with a forklift, secure the hook on the bracket bar to keep hook from interfering when loading.



**GO BACK AND TIGHTEN ALL HARDWARE.**  
**INSTALL AND ASSEMBLY ARE COMPLETE.**