


Drop Down Ladder Racks



Clamp & Lock Ladder Racks



Crossbar Racks

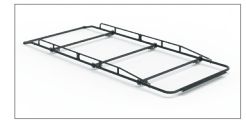

Cargo Racks

Passenger Side Driver Side

Passenger Side Driver Side

2 Bars 3rd Bar

(5 Crossbars)

	Passenger Side	Driver Side	Passenger Side	Driver Side	2 Bars	3rd Bar	(5 Crossbars)
GM							
CHEVY EXPRESS, GMC SAVANA	4092L*	40963	4082L*	4081L	40823	40824	80160*
Factory Preassembled Double Drop Down Rack	4095L*						
*Required Mount Kit	409CD		408CC				4089C
FORD							
TRANSIT LOW ROOF	4092L*	40963	4082L*	4081L	40821	40822	80160*
Factory Preassembled Double Drop Down Rack	4095L*						
*Required Mount Kit	409TD		408TC				4089T
TRANSIT MID/HIGH ROOF	4099H*	40913			40821	40822	80160*
*Required Mount Kit	409TD						4089T
TRANSIT CONNECT	40933	40943	4080L	4081L	40821	40822	80100*
*Required Mount Kit							4089D
MERCEDES							
METRIS - 126" WB only	4092L*	40963	4082L*	4081L	40821	40822	
Factory Preassembled Double Drop Down Rack	4095L*						
*Required Mount Kit	4081M		4081M				
SPRINTER STANDARD ROOF	4097M*	40983			40821	40822	80160*
*Required Mount Kit	4081S						4089T
SPRINTER HIGH ROOF	4099H*	40913			40821	40822	80160*
*Required Mount Kit	4081S						4089T
NISSAN							
NV LOW ROOF	4092L*	40963	4082L*	4081L	40821	40822	80160*
Factory Preassembled Double Drop Down Rack	4095L*						
*Required Mount Kit	409ND		409ND				4089T
NV HIGH ROOF	4099H*	40913					
*Required Mount Kit	409ND						
NV200	40933	40943	4080L	4081L	40821	40822	80100*
*Mount Kit Included							4089D
RAM							
PROMASTER LOW ROOF	4097M*	40983			40821*	40822	80160*
*Required Mount Kit	4081P				40918		4089P
PROMASTER HIGH/SUPER HIGH ROOF	4099H*	40913			40821*	40822	80160*
*Required Mount Kit	4081P				40918		4089P
PROMASTER CITY	40933	40943	4080L	4081L	40821	40822	80100*
*Required Mount Kit							4089D



Drop Down Ladder Racks



Clamp & Lock Ladder Racks



Crossbar Racks



Cargo Racks

Passenger Side Driver Side

Passenger Side Driver Side

2 Bars 3rd Bar

(5 Crossbars)

GM	Passenger Side	Driver Side	Passenger Side	Driver Side	2 Bars	3rd Bar	(5 Crossbars)
CHEVY EXPRESS, GMC SAVANA	4A93L*	4A96L	4A82L*	4A81L	4A823	4A824	8016A*
Factory Preassembled Double Drop Down Rack	4A95L*						
*Required Mount Kit	409CD		408CC				4089C
FORD							
TRANSIT LOW ROOF	4A93L*	4A96L	4A82L*	4A81L	4A821	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95L*						
*Required Mount Kit	409TD		408TC				4089T
TRANSIT MID/HIGH ROOF	4A99H*	4A91H			4A821	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	409TD						4089T
TRANSIT CONNECT	4A97L	4A98L	4A80L	4A81L	4A821	4A822	8010A*
Factory Preassembled Double Drop Down Rack	4A95C						
*Required Mount Kit							4089D
MERCEDES							
METRIS - 126" WB and 135" WB	4A97L	4A98L	4A80L	4A81L	4A821	4A822	
Factory Preassembled Double Drop Down Rack	4A95C						
SPRINTER STANDARD ROOF	4A93M*	4A96M			4A821	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95M*						
*Required Mount Kit	4081S						4089T
SPRINTER HIGH ROOF	4A99H*	4A91H			4A821	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	4081S						4089T
NISSAN							
NV LOW ROOF	4A93L*	4A96L	4A82L*	4A81L	4A821	4A822	8016A*
Factory Preassembled-Assembled Double Drop Down Rack	4A95L*						
*Required Mount Kit	409ND		409ND				4089T
NV HIGH ROOF	4A99H*	4A91H					
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	409ND						
NV200	4A97L	4A98L	4A80L	4A81L	4A821	4A822	8010A*
Factory Preassembled Double Drop Down Rack	4A95C						
*Required Mount Kit							4089D
PROMASTER STANDARD ROOF	4A93M*	4A96M			4A821*	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95M*						
*Required Mount Kit	4081P				40918		4089P
PROMASTER HIGH/SUPER HIGH ROOF	4A99H*	4A91H			4A821*	4A822	8016A*
Factory Preassembled Double Drop Down Rack	4A95H*						
*Required Mount Kit	4081P				40918		4089P
PROMASTER CITY	4A97L	4A98L	4A80L	4A81L	4A821	4A822	8010A*
Factory Preassembled Double Drop Down Rack	4A95C						
*Required Mount Kit							4089D