


Holman

Window Screen Installation Guide

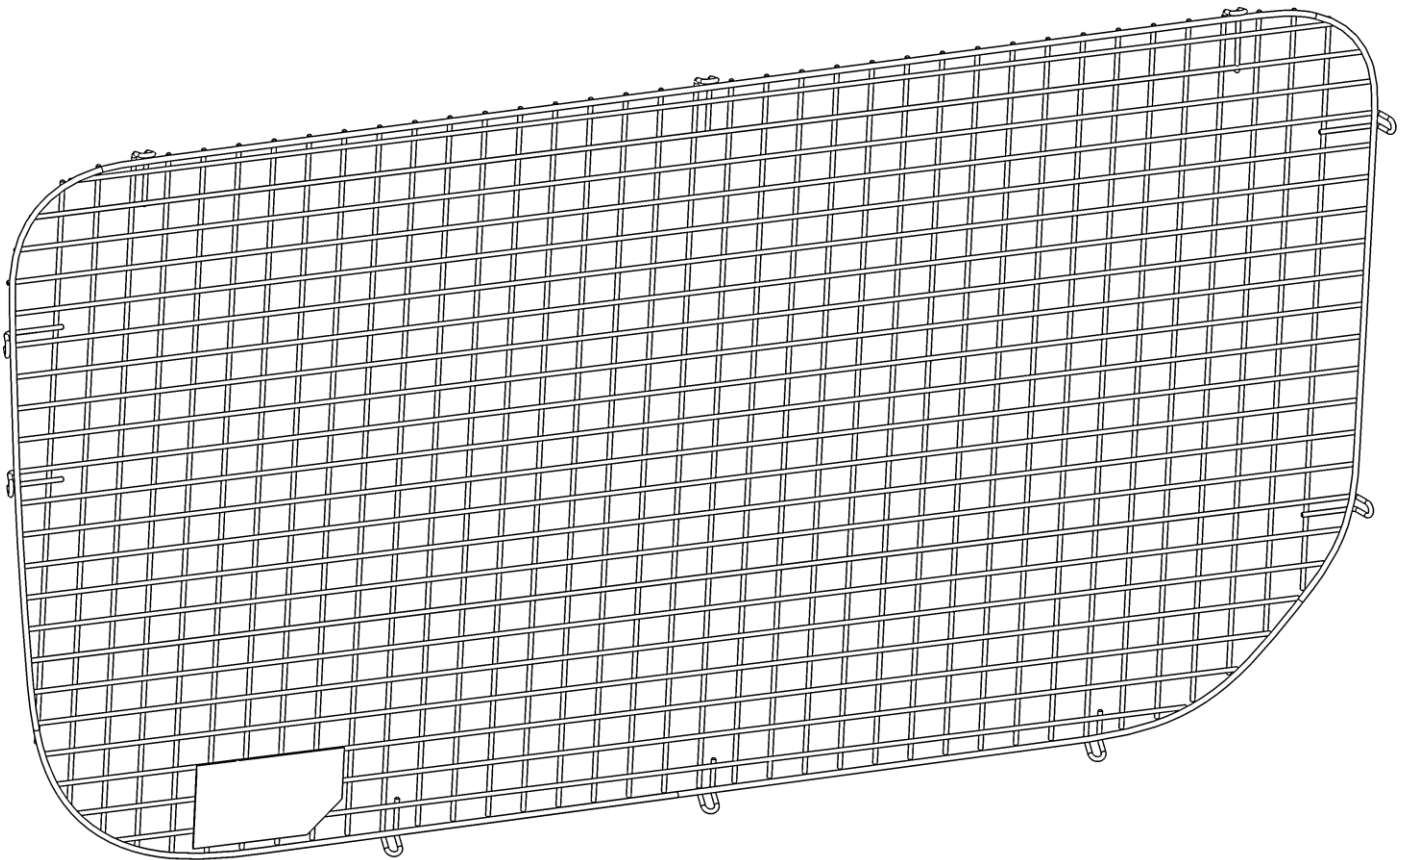

Holman

Rancho Cordova, CA 95742

800-343-7486

InstallationSupport@Holman.com

PLEASE READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO ASSEMBLING, INSTALLING, AND USING THIS PRODUCT.

Warning



Always check for electrical wires, fuel tanks and lines, brake lines and other important vehicle functionality items prior to drilling and installing all products.

Tools Needed

3/8" Hex Driver Bit	5/32" Drill Bit
Torque Adjustable Drill Driver	


Table of Contents

Parts List..... 1
 Hardware 2
 Hardware Cont. 3



Before You Begin

- Read all instructions prior to installing any product.

Parts List

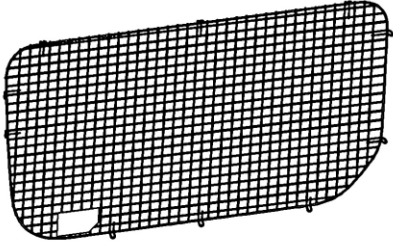ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY
1		-	WINDOW SCREEN	1 OR 2
2		SEE BELOW	HARDWARE KIT	1

Hardware


WINDOW SCREEN	DESCRIPTION	HARDWARE KIT	QTY REQUIRED	HARDWARE DESCRIPTION	
4070C	GM SIDE HINGED DOOR	18-407X20	17	<p>#12 X 3/4" HEX HEAD SHEET METAL SCREW</p> 	
4071C	GM SLIDING SIDE DOOR	18-407X20	16		
4072C	GM REAR DOOR	18-407X20	20		
4070T	TRANSIT LOW ROOF HINGED SIDE DOOR	18-407X20	16		
4071T	TRANSIT LOW ROOF SLIDING SIDE DOOR	18-407X10	10		
4073T	TRANSIT REAR DOOR	18-407X20	16		
4075T	TRANSIT MID/HIGH ROOF SLIDING SIDE DOOR	18-407X10	10		
4076T	TRANSIT MID/HIGH ROOF REAR DOOR	18-407X20	16		
4079T	TRANSIT CONNECT REAR DOOR	18-407X15	12		
4070TC	105" TRANSIT CONNECT PASSENGER SIDE SLIDING DOOR	18-407X10	7		<p>#12 EXTERNAL TOOTH LOCK WASHER</p> 
4071TC	105" TRANSIT CONNECT DRIVER SIDE SLIDING DOOR	18-407X10	7		
4072TC	120" TRANSIT CONNECT PASSENGER SIDE SLIDING DOOR	18-407X10	9		
4073TC	120" TRANSIT CONNECT DRIVER SIDE SLIDING DOOR	18-407X10	9		
4070P	PROMASTER PASSENGER SIDE SLIDING DOOR	18-407X10	10		
4071P	PROMASTER REAR HINGED DOORS	18-407X20	16		
4070S	2019+ SPRINTER PASSENGER SIDE SLIDING DOOR	18-407X10	10		
4071S	2019+ SPRINTER DRIVER SIDE SLIDING DOOR	18-407X10	10		

Hardware Cont.



WINDOW SCREEN	DESCRIPTION	HARDWARE KIT	QTY REQUIRED	HARDWARE DESCRIPTION
4072S	2019+ SPRINTER REAR HINGED DOORS	18-407X15	14	
4070PC	PROMASTER CITY PASSENGER SIDE SLIDING DOOR	18-407X10	10	
4071PC	PROMASTER CITY DRIVER SIDE SLIDING DOOR	18-407X10	10	
4072PC	PROMASTER CITY REAR HINGED DOORS	18-407X20	16	
4070M	METRIS PASSENGER SIDE SLIDING DOOR	18-407X15	12	
4071M	METRIS REAR HINGED DOORS	18-407X25	22	

Install Window Screen


- Hold window screen firmly in location and position to be installed. **Be sure the small metal plate is located nearest the door lock.**

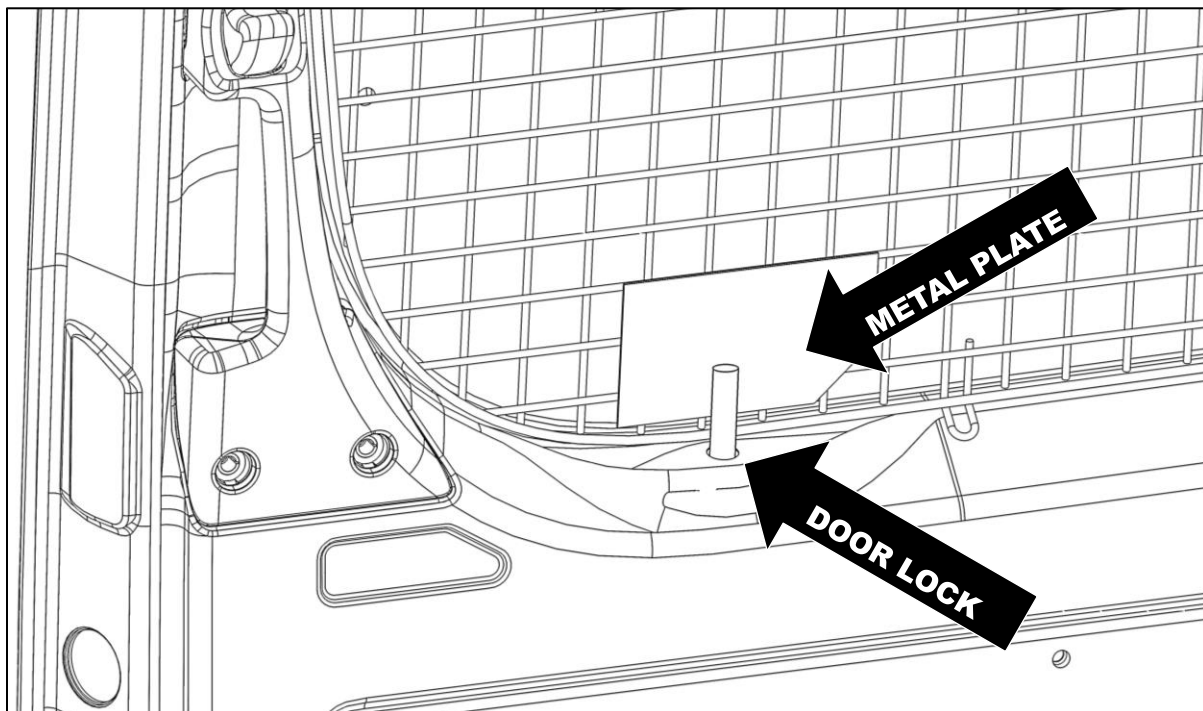

- Mark location of each screen attachment point onto door. The screen will attach through the wire loops extending from the window screen.
- Set window screen aside.
- Using a 5/32" drill bit and drill, drill a hole at each location marked.

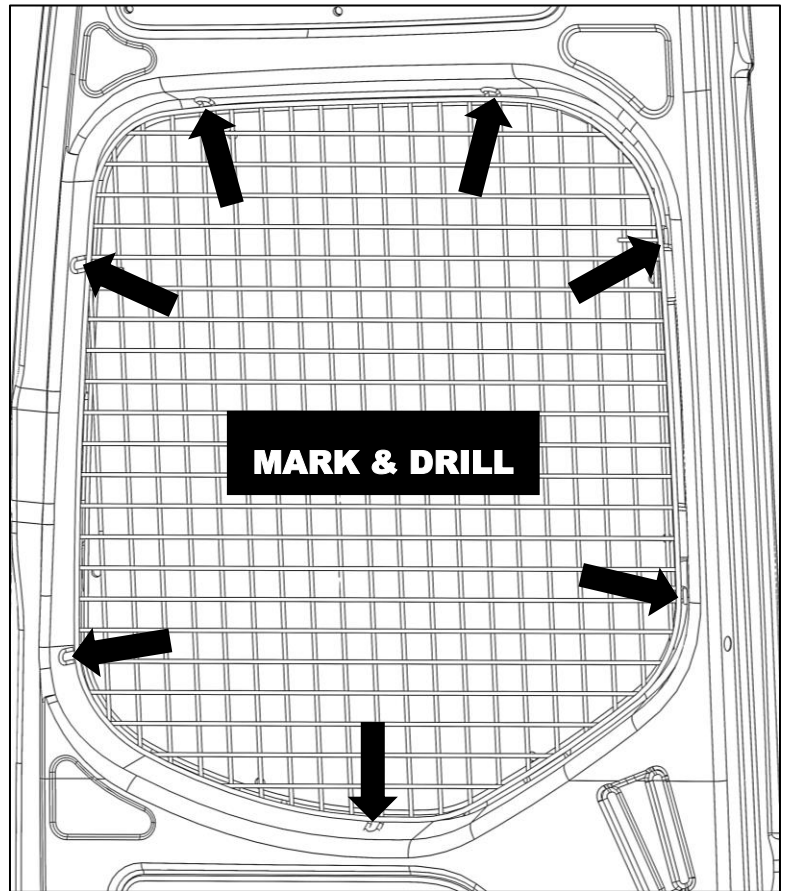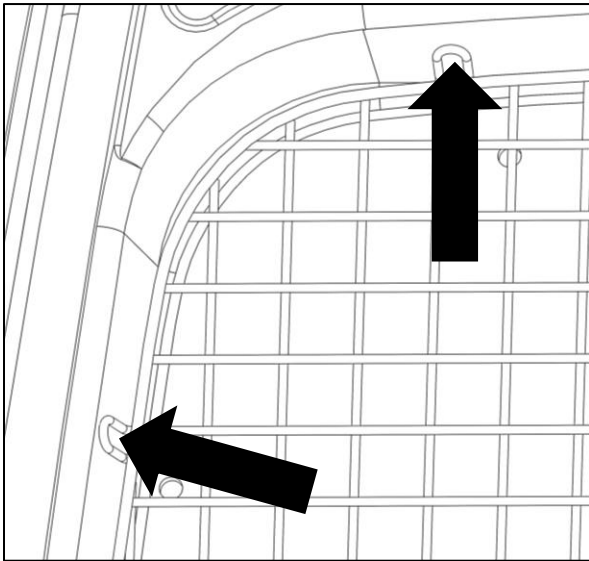

- Using #12 x 3/4" sheet metal screws and #12 external tooth lock washers, **LOOSELY** install the window screen to the door at each bent loop in the window screen. **DO NOT TIGHTEN** screws until all screws have been loosely installed.
- **TIGHTEN** all screws. **WHEN USING A DRILL DRIVER**, it is recommended to set the driver to the lowest torque setting and increase the torque only as necessary.

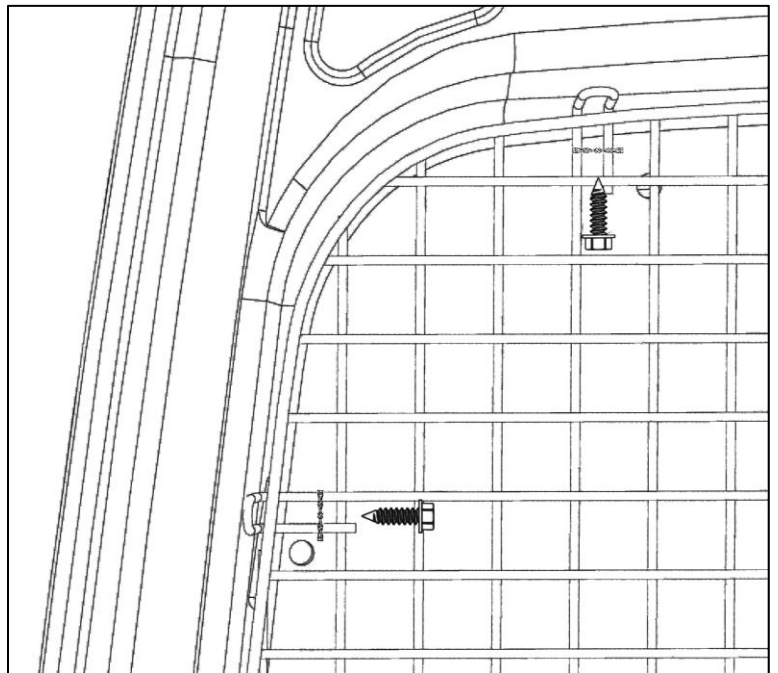

INSTALLATION IS COMPLETE.